


Specifications

Current Ranges	Field Selectable Ranges (See Model Number Key)
Over Range	Over Range Models (300 & 400A) allow measurement of surges and faults.
Custom Ranges	Available; consult factory.
Output Signal	4-20mA, 0-5VDC or 0-10VDC
Accuracy	2% FS
Output Polarity	Unipolar: Current magnitude only
Frequency Range	DC
Isolation Voltage	3kV (Monitored line to output)
Linearity	0.75%
Response Time	100 mS (to 90% of step change)
Repeatability	1% FS
Power Supply	20-45VDC or 22-38 VAC Power and output signal are not isolated. Caution: Connecting AC supply to output negative may damage output.
Power Consumption	2 VA
Case	UL 94V-0 Flammability rated thermoplastic
Environmental	-20 to 50 Deg. C, 0-95% RH, non-condensing
Temperature Drift	0.01%/Deg C

Output Polarity

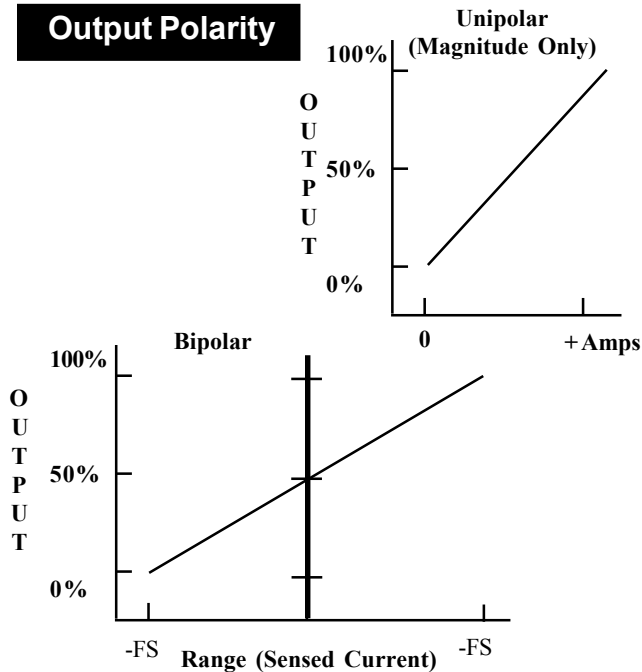

Model Number Key

DT	1	-	420	-	24U	-	U	-	SP
									CASE STYLE
									SP- Split Core
									OUTPUT POLARITY
									U- Unipolar (Magnitude)
									BP - BiPolar
									POWER SUPPLY:
									24U- 24 VAC or VDC (Universal)
									OUTPUT:
									005- 0-5 VDC
									010 0-10 VDC
									020 0-20 mA
									420 4-20 mA
									RANGE
									1 50, 75, 100 A
									2 100, 150, 200 A
									3 150, 225, 300 A
									4 200, 300, 400 A

SENSOR TYPE:

DT - DC current sensor with analog output

Know Your Power



Other NK Technologies Products Include:

DC Current Switches, Ground Fault Sensors
AC & DC Current Switches
Power Transducers
Current & Potential Transformers (CTs&PTs)



NK Technologies

500 Division Street, Campbell CA 95008
800-959-4014 or +1-408-871-7510 Phone
+1-408-871-7515 FAX

sales@nktechnologies.com, www.nktechnologies.com



INSTRUCTIONS



DT SERIES

Uni-Polar or BiPolar
4-20mA or 0-5/0-10VDC Output

Quick "How To" Guide

- Route wire to be monitored through aperture. Ensure current flow matches any arrow on sensor.
- Mount the sensor to a surface if needed.
- Connect output wiring.
Caution: Do not connect grounded AC supply to Output negative terminal. This may damage sensor output circuitry.
 - Use up to 14 AWG copper wires. Tighten terminals to 4 inch-pounds torque.
 - For mA output models, make sure output load is no more than 800 Ω .
 - For VDC output models, make sure output load is at least 10K Ω .
- Connect Power
 - Connect the appropriate power supply.
- Select Range
 - Chose correct range by positioning the Range Jumper.

Description

DT Series transducers combine a Hall Effect sensor and a signal conditioner into a single package. This provides higher accuracy, lower wiring costs, easier installation and saves valuable panel space. DT Series are available in split core with 0-20mA, 4-20mA, 0-5VDC or 0-10 VDC outputs.

Installation


For All Versions

Run wire to be monitored through opening in the sensor. Be sure the monitored current flows in the same direction as indicated by arrow on sensor. The arrow is just above the hinge, with the “+” symbol on the left, the “-” symbol on the right on the unipolar designs; bipolar models accept current flow in both directions.

DT Series transducers work in the same environment as motors, contactors, heaters, pull-boxes, and other electrical enclosures. They can be mounted in any position or hung directly on wires with a wire tie. Just leave at least one inch distance between sensor and other magnetic devices.

Split-Core

Press the tab in the direction as shown to open the sensor. After placing the wire in the opening, press the hinged portion firmly downward until a definite click is heard and the tab pops out fully.

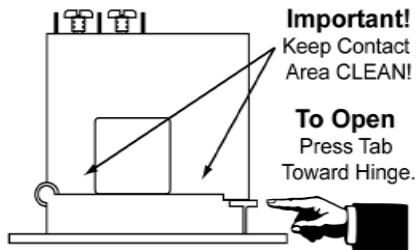

KEEP SPLIT-CORE SENSORS CLEAN.

Silicone grease is factory applied on the mating surfaces to prevent rust and improve performance. Be careful not to allow grit or dirt onto the grease in the contact area. Operation can be impaired if the mating surfaces do not have good contact. Check visually before closing.

Output Wiring

Connect control or monitoring wires to the sensor. Use up to 14 AWG copper wire and tighten terminals to 4 inch-pounds torque.


0-20mA & 4-20mA:

The current loop is powered by the DT Transducer.

Maximum loop impedance is 800 Ω .

0-5VDC & 0-10 VDC:

Signal is powered by the DT Transducer. Minimum output load (impedance) is 10K Ω .

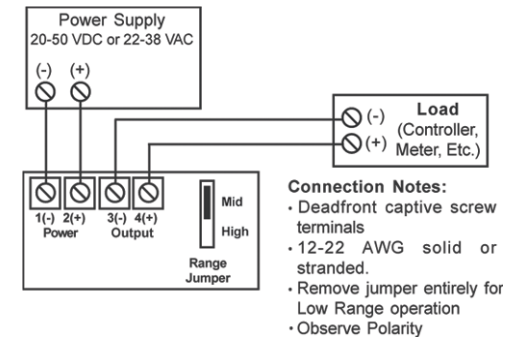

Range Select

DT Series transducers feature field selectable ranges. The ranges are factory calibrated, eliminating time consuming and inaccurate field setting of zero or span.

1. Determine the normal operating amperage of your monitored circuit
2. Select the range that is equal to or slightly higher than the normal operating amperage.
3. Place the range jumper in the appropriate position.

Trouble Shooting - 0-20 & 4-20mA Models

1. Output Signal Too Low

- A. The jumper may be set in a range that is too high for current being monitored. *Move jumper to the correct range.*
- B. Power supply is inadequate. *Check power supply. Make sure it is of sufficient voltage with all loads at maximum. DT Series draw 2.0 VA.*
- C. Output load too high *Check output load, be sure it is no more than 800 Ω .*

2. Output Signal is always at maximum

- A. The jumper may be set in a range that is too low for current being monitored. *Move jumper to the correct range.*

3. Sensor has no output

- A. Polarity is not properly matched. *Check and correct wiring polarity*
- B. Monitored load is not DC or is not on. *Check that the monitored load is DC and that it is actually on.*
- C. Split Core models: The core contact area may be dirty. *Open the sensor and clean the contact area.*

Trouble Shooting - 0-5VDC & 0-10 VDC Models

1. Output Signal Too Low

- A. The jumper may be set in a range that is too high for current being monitored. *Move jumper to the correct range.*
- B. Power supply is inadequate. *Check power supply. Make sure it is of sufficient voltage with all loads at maximum. DT Series draw 2.0 VA.*
- C. Output load too low. *Check output load, be sure it is at least 10K Ω .*

2. Output Signal is always at maximum

- A. The jumper may be set in a range that is too low for current being monitored. *Move jumper to the correct range.*

3. Sensor has no output

- A. Polarity is not properly matched. *Check and correct wiring polarity*
- B. Monitored load is not DC or is not on. *Check that the monitored load is DC and that it is actually on.*
- C. Split Core models: The core contact area may be dirty. *Open the sensor and clean the contact area.*