

The ACI Series AmpFlasher is a self-powered sensor that provides a flashing LED signal to indicate current flowing through a conductor. It is designed for control panel applications, offering rapid visual confirmation of current and helping to identify live conductors.

#### Specifications

Model	ACI - 0.5 - L
	ACI - 0.5 - P
Current Range	0.5 A - 100 A
Description	Current Indicator, 0.5 A trip, flashing LED
Aperture ID	0.30" ID
Case	UL94 V-0 Flammability Rated
Environmental	-4 to 122°F (-20 to 50°C), 0-95% RH
Frequency	50 - 400 Hz
Listings	UL/cUL, CE


#### Installation

The ACI Current Indicator is installed by sliding it directly onto the current-carrying conductor. It can be secured with a tie wrap or by looping the conductor multiple times. For remote LED mounting (ACI-0.5-P), drill a 0.25" hole in the panel (0.032" to 0.125" thick), insert the clip from the front, slide the ring over the LED, snap the LED into the clip, and then attach the ring to the back of the clip.

Designed and Assembled in the USA.



3511 Charter Park Drive, San Jose, CA 95136  
800-959-4014, sales@nktechnologies.com, www.nktechnologies.com 390200003 Rev 5

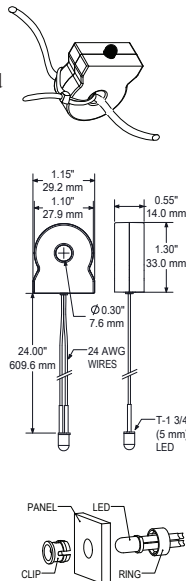

The ACI Series AmpFlasher is a self-powered sensor that provides a flashing LED signal to indicate current flowing through a conductor. It is designed for control panel applications, offering rapid visual confirmation of current and helping to identify live conductors.

#### Specifications

Model	ACI - 0.5 - L
	ACI - 0.5 - P
Current Range	0.5 A - 100 A
Description	Current Indicator, 0.5 A trip, flashing LED
Aperture ID	0.30" ID
Case	UL94 V-0 Flammability Rated
Environmental	-4 to 122°F (-20 to 50°C), 0-95% RH
Frequency	50 - 400 Hz
Listings	UL/cUL, CE


#### Installation

The ACI Current Indicator is installed by sliding it directly onto the current-carrying conductor. It can be secured with a tie wrap or by looping the conductor multiple times. For remote LED mounting (ACI-0.5-P), drill a 0.25" hole in the panel (0.032" to 0.125" thick), insert the clip from the front, slide the ring over the LED, snap the LED into the clip, and then attach the ring to the back of the clip.

Designed and Assembled in the USA.



3511 Charter Park Drive, San Jose, CA 95136  
800-959-4014, sales@nktechnologies.com, www.nktechnologies.com 390200003 Rev 5

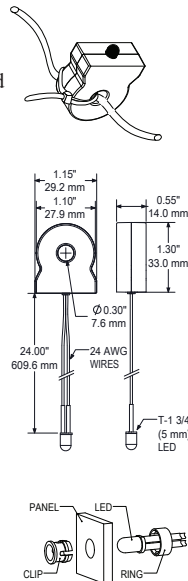

The ACI Series AmpFlasher is a self-powered sensor that provides a flashing LED signal to indicate current flowing through a conductor. It is designed for control panel applications, offering rapid visual confirmation of current and helping to identify live conductors.

#### Specifications

Model	ACI - 0.5 - L
	ACI - 0.5 - P
Current Range	0.5 A - 100 A
Description	Current Indicator, 0.5 A trip, flashing LED
Aperture ID	0.30" ID
Case	UL94 V-0 Flammability Rated
Environmental	-4 to 122°F (-20 to 50°C), 0-95% RH
Frequency	50 - 400 Hz
Listings	UL/cUL, CE


#### Installation

The ACI Current Indicator is installed by sliding it directly onto the current-carrying conductor. It can be secured with a tie wrap or by looping the conductor multiple times. For remote LED mounting (ACI-0.5-P), drill a 0.25" hole in the panel (0.032" to 0.125" thick), insert the clip from the front, slide the ring over the LED, snap the LED into the clip, and then attach the ring to the back of the clip.

Designed and Assembled in the USA.



3511 Charter Park Drive, San Jose, CA 95136  
800-959-4014, sales@nktechnologies.com, www.nktechnologies.com 390200003 Rev 5

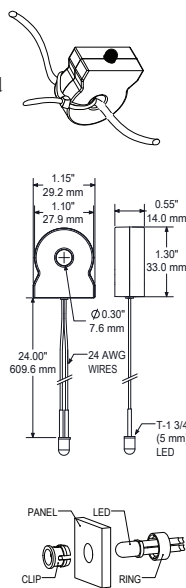

The ACI Series AmpFlasher is a self-powered sensor that provides a flashing LED signal to indicate current flowing through a conductor. It is designed for control panel applications, offering rapid visual confirmation of current and helping to identify live conductors.

#### Specifications

Model	ACI - 0.5 - L
	ACI - 0.5 - P
Current Range	0.5 A - 100 A
Description	Current Indicator, 0.5 A trip, flashing LED
Aperture ID	0.30" ID
Case	UL94 V-0 Flammability Rated
Environmental	-4 to 122°F (-20 to 50°C), 0-95% RH
Frequency	50 - 400 Hz
Listings	UL/cUL, CE


#### Installation

The ACI Current Indicator is installed by sliding it directly onto the current-carrying conductor. It can be secured with a tie wrap or by looping the conductor multiple times. For remote LED mounting (ACI-0.5-P), drill a 0.25" hole in the panel (0.032" to 0.125" thick), insert the clip from the front, slide the ring over the LED, snap the LED into the clip, and then attach the ring to the back of the clip.

Designed and Assembled in the USA.



3511 Charter Park Drive, San Jose, CA 95136  
800-959-4014, sales@nktechnologies.com, www.nktechnologies.com 390200003 Rev 5

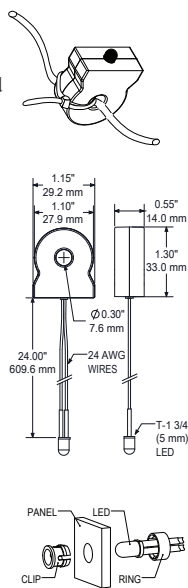

The ACI Series AmpFlasher is a self-powered sensor that provides a flashing LED signal to indicate current flowing through a conductor. It is designed for control panel applications, offering rapid visual confirmation of current and helping to identify live conductors.

#### Specifications

Model	ACI - 0.5 - L
	ACI - 0.5 - P
Current Range	0.5 A - 100 A
Description	Current Indicator, 0.5 A trip, flashing LED
Aperture ID	0.30" ID
Case	UL94 V-0 Flammability Rated
Environmental	-4 to 122°F (-20 to 50°C), 0-95% RH
Frequency	50 - 400 Hz
Listings	UL/cUL, CE


#### Installation

The ACI Current Indicator is installed by sliding it directly onto the current-carrying conductor. It can be secured with a tie wrap or by looping the conductor multiple times. For remote LED mounting (ACI-0.5-P), drill a 0.25" hole in the panel (0.032" to 0.125" thick), insert the clip from the front, slide the ring over the LED, snap the LED into the clip, and then attach the ring to the back of the clip.

Designed and Assembled in the USA.



3511 Charter Park Drive, San Jose, CA 95136  
800-959-4014, sales@nktechnologies.com, www.nktechnologies.com 390200003 Rev 5

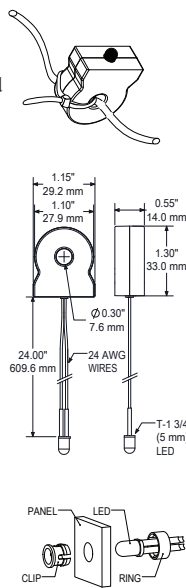

The ACI Series AmpFlasher is a self-powered sensor that provides a flashing LED signal to indicate current flowing through a conductor. It is designed for control panel applications, offering rapid visual confirmation of current and helping to identify live conductors.

#### Specifications

Model	ACI - 0.5 - L
	ACI - 0.5 - P
Current Range	0.5 A - 100 A
Description	Current Indicator, 0.5 A trip, flashing LED
Aperture ID	0.30" ID
Case	UL94 V-0 Flammability Rated
Environmental	-4 to 122°F (-20 to 50°C), 0-95% RH
Frequency	50 - 400 Hz
Listings	UL/cUL, CE

#### Installation

The ACI Current Indicator is installed by sliding it directly onto the current-carrying conductor. It can be secured with a tie wrap or by looping the conductor multiple times. For remote LED mounting (ACI-0.5-P), drill a 0.25" hole in the panel (0.032" to 0.125" thick), insert the clip from the front, slide the ring over the LED, snap the LED into the clip, and then attach the ring to the back of the clip.

Designed and Assembled in the USA.



3511 Charter Park Drive, San Jose, CA 95136  
800-959-4014, sales@nktechnologies.com, www.nktechnologies.com 390200003 Rev 5

