

## Specifications

Power Supply	24VAC/DC External Power (22-26VAC or DC), <4VA Power supply is isolated from monitored circuit and output signal Use class 2 power supply
Voltage Measurement Output	0-800, 1000 or 1200 VAC or DC 4-20mA (capped at 24mA max) 0-5 VDC 0-10 VDC
Response Time	100 ms (to 90% value)
Accuracy	< 1% Full Scale
Linearity	< 0.5%
Loading	4-20mA: < 400 ohms 0-5/0-10VDC >100 ohms
Isolation Voltage	5000 Volts
Frequency Range	0-400 Hertz
Operating Temp.	-20°C to 50°C (surrounding sensor)
Enclosure Environmental	UL94 V0 Rated -4 to 122 ° F (-20 to 50° C),0-95% RH non-condensing Pollution Degree 2 Altitude to 2000 meters
Listings	UL/cUL Listed, CE approved

### Warning! Risk of danger



Safe operation can only be guaranteed if the transducer is used for the purpose for which it was designed and within the limits of the technical specifications. When this symbol is used, it means you must consult all documentation to understand the nature of potential hazards and the action required to avoid them.

### Warning! Risk of electrical shock



When operating the transducer certain parts may carry hazardous live voltage (e.g. primary conductors, power supply). The transducer should not be put into operation if the installation is not complete.

## Model Number Key

VTU 10 - 420 - 24U - OS

**CASE STYLE:**  
OS - DIN rail compatible

**POWER SUPPLY:**  
24U - Nominal 24 VAC/DC

**OUTPUT:**  
420 - 4-20mA  
005 - 0-5VDC  
010 - 0-10VDC

**VOLTAGE INPUT RANGE:**  
8 - 800V  
10 - 1000V  
12 - 1200V

**SENSOR TYPE:**  
VTU - AC/DC Voltage Transducers

## Know Your Power



### Other NK Technologies Products Include:

AC & DC Current Transducers  
AC & DC Current Operated Switches  
1 $\phi$  & 3 $\phi$  Power Transducers  
Current & Potential Transformers (CTs & PTs)



## NK Technologies

3511 Charter Park Drive, San Jose, CA 95136  
800-959-4014 or 408-871-7510 Phone  
408-871-7515 FAX  
sales@nktechnologies.com, www.nktechnologies.com



# INSTRUCTIONS



## VTU SERIES

AC/DC Voltage Transducers  
Ranges 800, 1000 and 1200 Volts  
4-20mA, 0-5/10VDC Outputs

### Quick "How To" Guide

1. Ensure correct sensor model was chosen for Input Voltage of application.
2. Mount the sensor to a DIN rail using integrated mounting clip on backside of transducer or secure using the tabs in each corner.
3. Connect monitored voltage (2) & (1) using 22-16 AWG copper wires insulated to 75/90°. Lift the orange clip on the terminal, insert wire and allow it to clamp on the stripped end of the wire.  
  
Refer to "Output Wiring" section for voltage and impedance recommendations.
4. Connect 24VAC or DC power supply fused to 1 amp to term. 3-4. Use twisted pair for CE compliance.
5. Connect output to the load using terminal 6 for the positive signal, and terminal 5 to common or ground.
6. Energize primary circuit and sensor power.

## Description

VTU Series Voltage Transducers are designed to monitor AC or DC voltage and detect conditions where supply voltage is above or below normal. Detecting such conditions helps users to avoid problems commonly associated with voltage irregularities such as motor overheating, brownouts and conductor failure or poor connections. The VTU is available with 4-20mA, 0-5 or 0-10 VDC output options.

## Installation

VTU transducers feature a DIN rail compatible enclosure and are typically located in the same environment as motors, contactors, heaters, pull-boxes, and other electrical enclosures.

**To mount on DIN rail:** Orient transducer so that line voltage terminals (1) and (2) are upright/on top of unit and snap securely onto DIN rail. To remove, insert small screwdriver into the slots in the lower corners and pry the two mounting springs down until unit dislodges from DIN rail.

**To mount using screws:** Insert screws and mount to back plane or other suitably flat surface.

## Monitored Voltage Wiring Connection


**CAUTION: TO AVOID ANY POTENTIAL FOR SHOCK OR SAFETY HAZARD, ENSURE MONITORED VOLTAGE IS DISCONNECTED AT SOURCE BEFORE WIRING TO UNIT.**

Connect voltage to be monitored to terminals (1) and (2) on transducer using up to 16 AWG copper wires. Lift the orange clip, insert the stripped wire and release the clip. Proper torque will be applied.

**Use twisted pair for power supply conductors for full compliance with CE directives.**

## Output Wiring

Connect output signal wires to the sensor. Use up to 14 AWG copper wire insulated to 75/90°C and tighten terminals 3-6 to 7 inch-pounds torque.

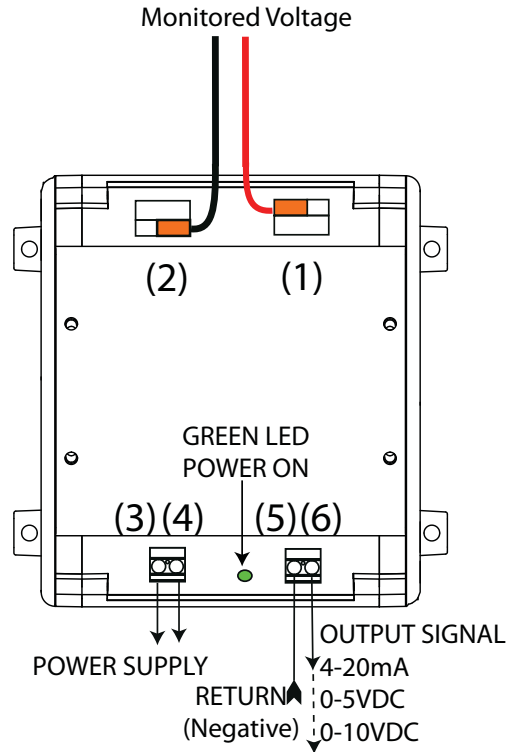

Note: The power supply is not polarity sensitive, as the unit can be powered with AC or DC voltage.

The Monitored circuit input is also not polarity sensitive, and can measure either AC or DC voltages.

## Troubleshooting Tips

### 1. Transducer has no output

- Power supply is not properly sized. *Check power supply voltage and output rating. Each transducer requires less than 4VA to operate.*
- Green LED should be on when the power supply is energized.

### 2. Output Signal Too Low or Too High

- Transducer model improperly sized for application. *Determine the normal operating voltage of your monitored circuit and ensure transducer selected is equal to or slightly higher than the normal operating voltage.*
- Output impedance is higher or lower than needed. *Check the settings of the controller or meter.*


### 3. Sensor is always at 4mA (or zero voltage)

Monitored circuit is not on. *Check that the monitored circuit is actually switched on, and that any fuses used are intact. Check the power supply if the sensor is designed for voltage output and the output is reading zero.*

### 4. Sensor is always at 20mA (or 5/10VDC)

Monitored voltage is higher than transducer range. *Select a higher range product.*

## Transducer Output vs. Monitored Voltage

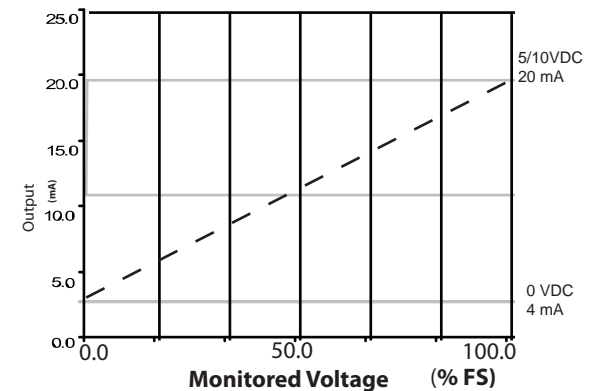

Note: Voltage output will be linear in the same manner, with zero at zero monitored voltage and 5 or 10 VDC at the full range measured voltage.